


STEP #1


Lay the range hood on a flat surface on its back side, as shown

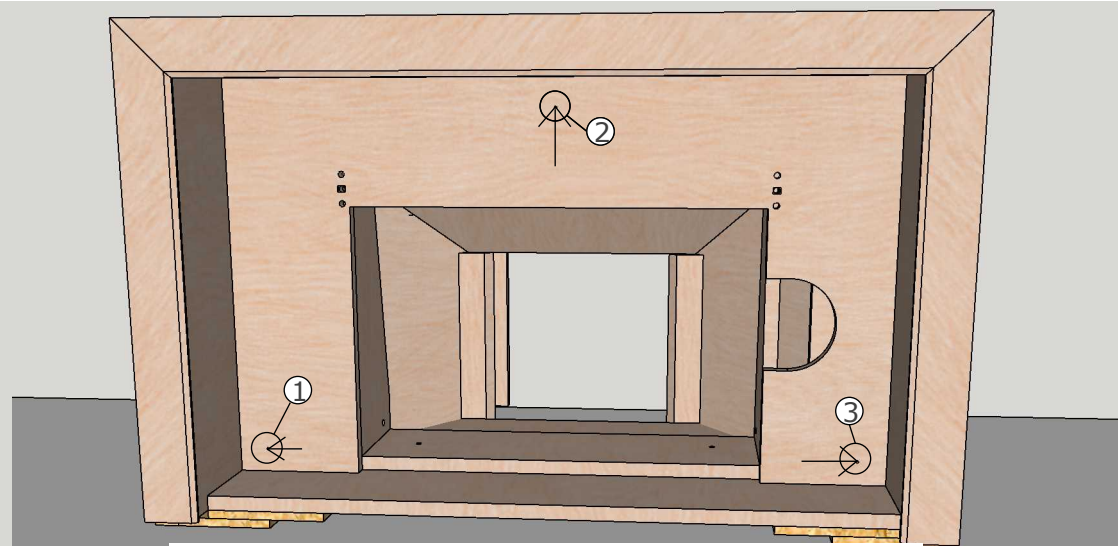

STEP #2


Inside the Base of the hood Remove the 3 Screws marked with the engraved arrow

Note: These screws were for shipping purposes only and will no longer be required.

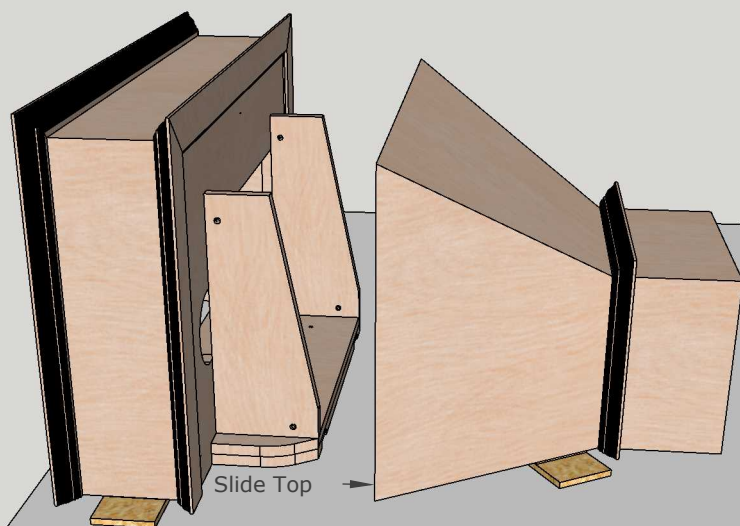


STEP #3

Slide the Top Assembly (Crown and Chimney) away from the base.

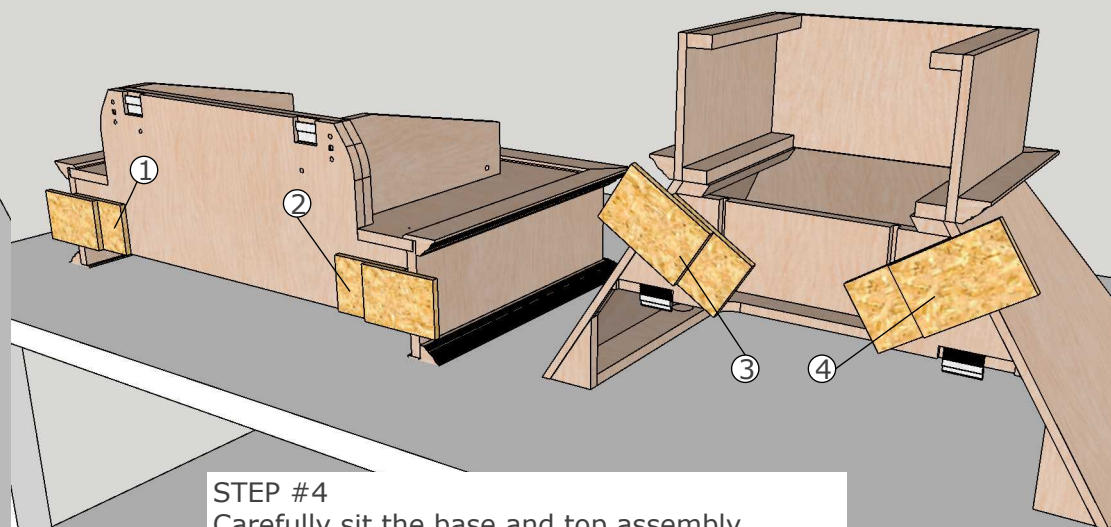

STEP #4

Carefully sit the base and top assembly upright on a flat surface. Remove the 4 shipping feet from the assemblies by removing the screws from each.

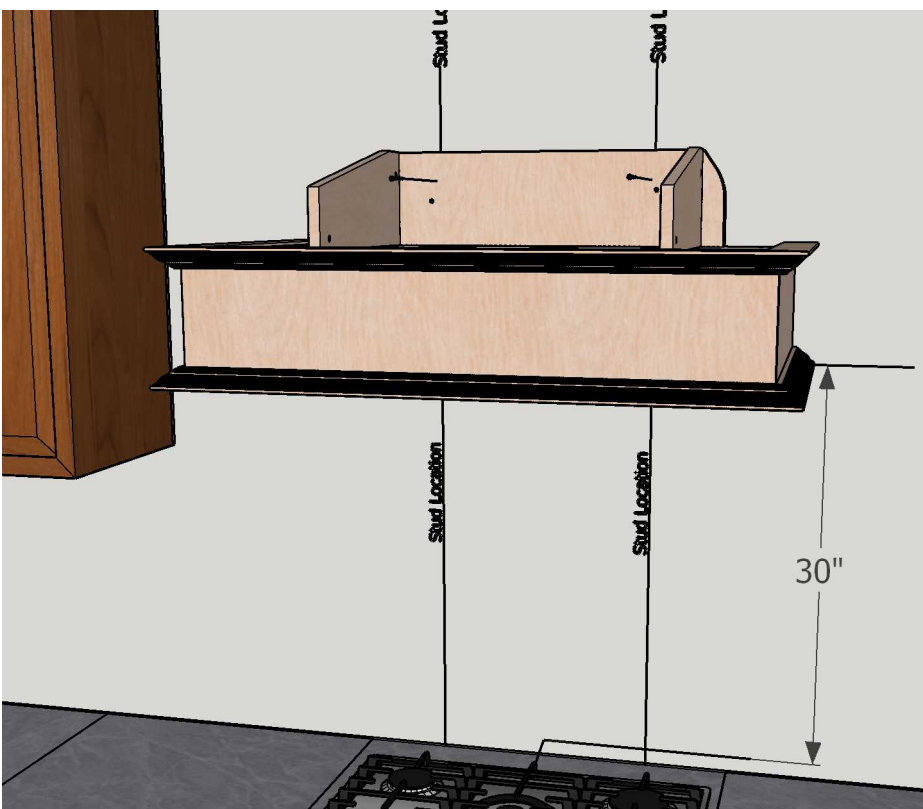



STEP #5



Locate all wall studs across the installation area. The base will need to be fastened to all studs that line up with the back plate of the base. Align base on the wall, base should be a minimum of 30" up from the top of the range. Make sure the base is level and drive screws through the rear plate at the stud locations. We recommend a minimum screw length of 2-1/2". Place screws at the top, middle, and bottom of the back base plate at each stud location.

Note: Removable Top - Allows installer to install the base and ventilation - then the top. We will need a minimum of 3/4" Clearance to lift top over base clips to install.
****Please Note that cutting or modification of any structural parts of this hood will result in loss of warranty**

Step #6

Install the ventilation system in the base of the hood

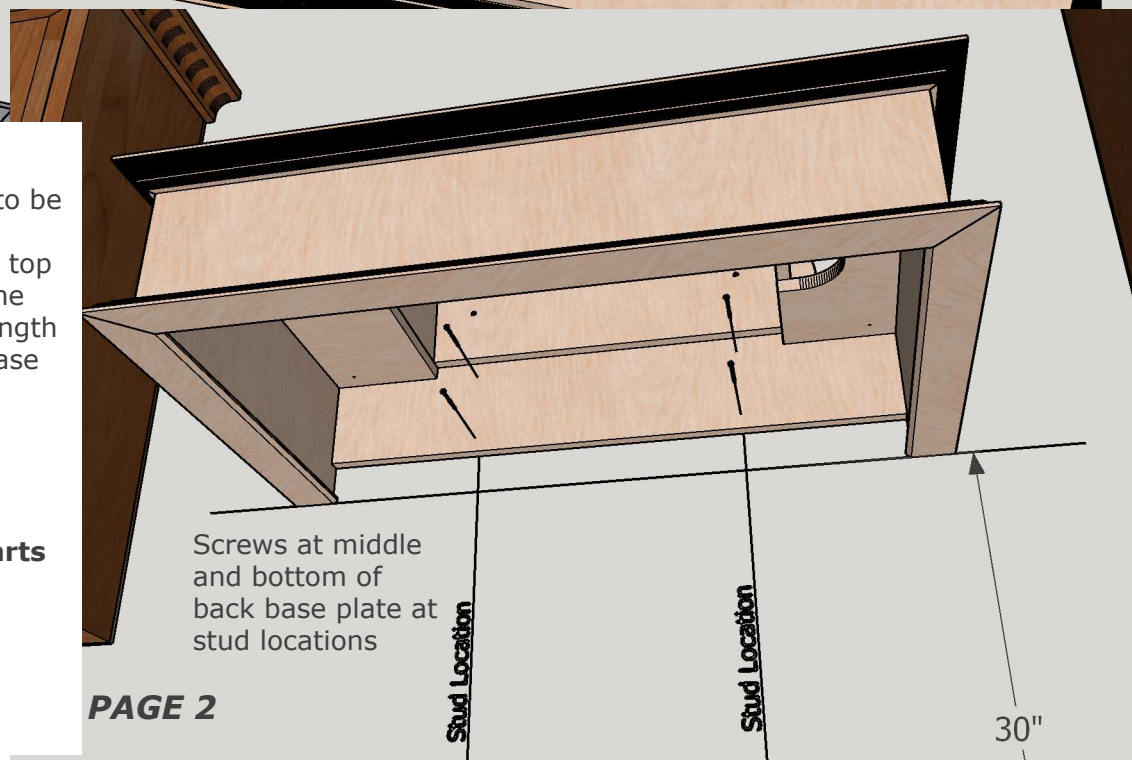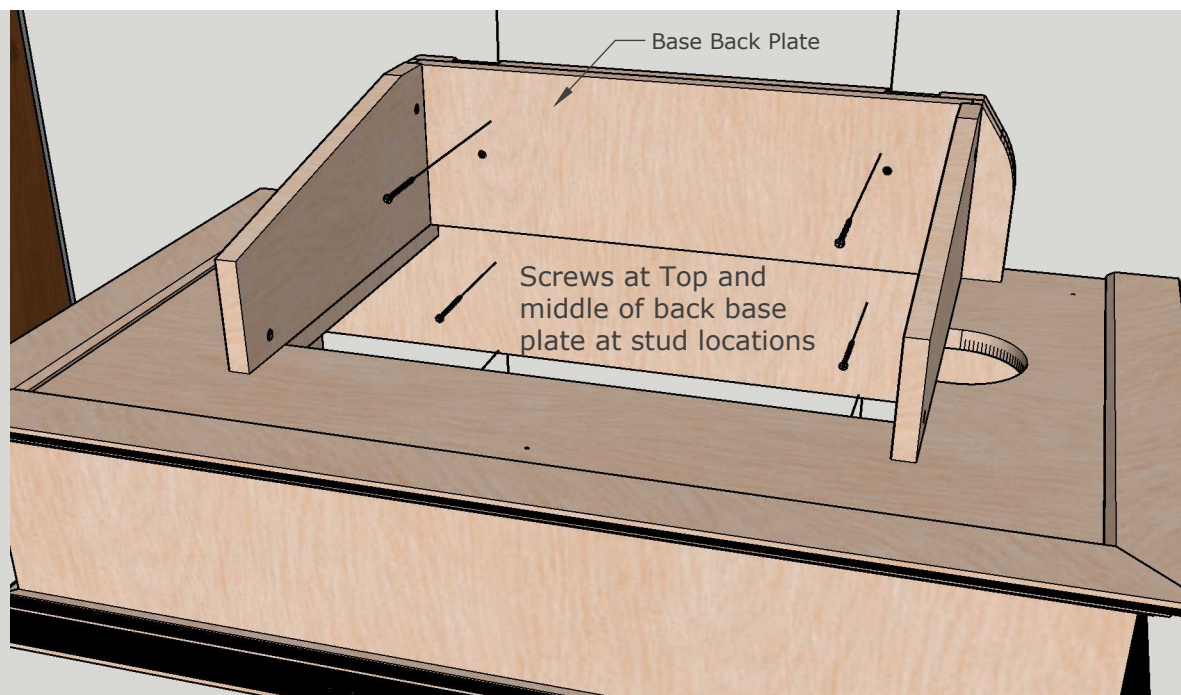

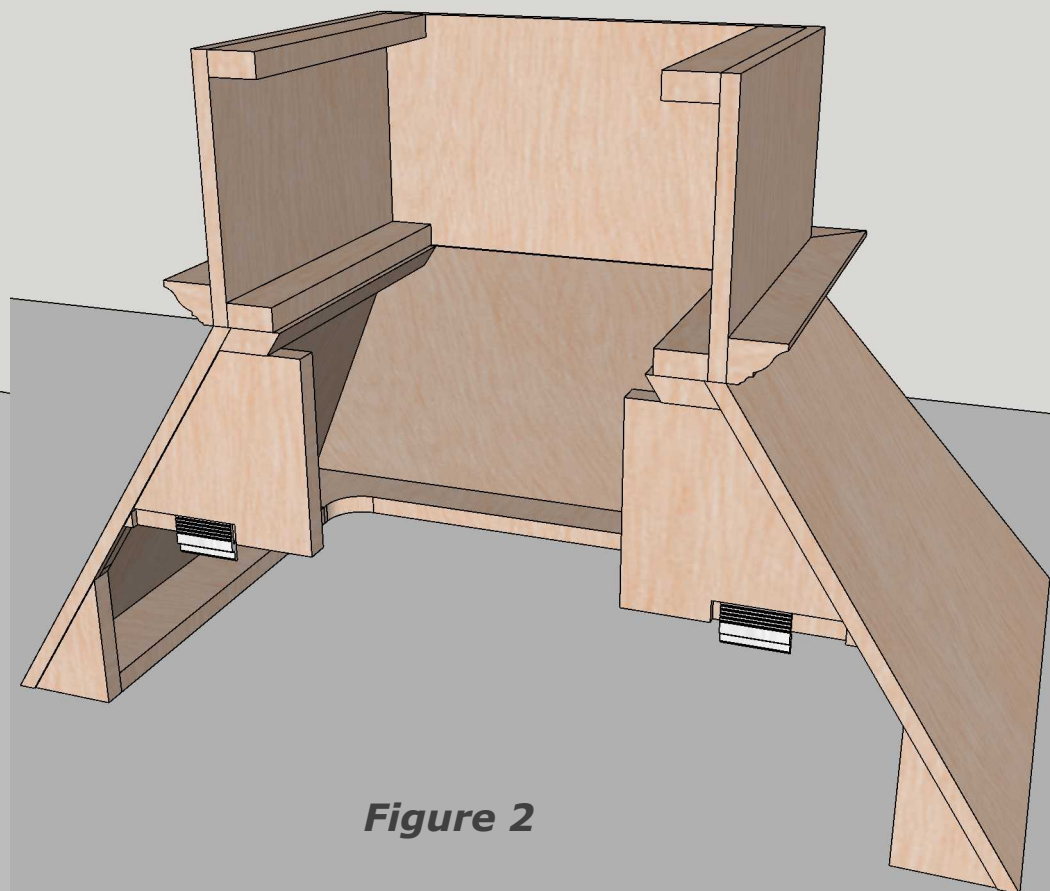
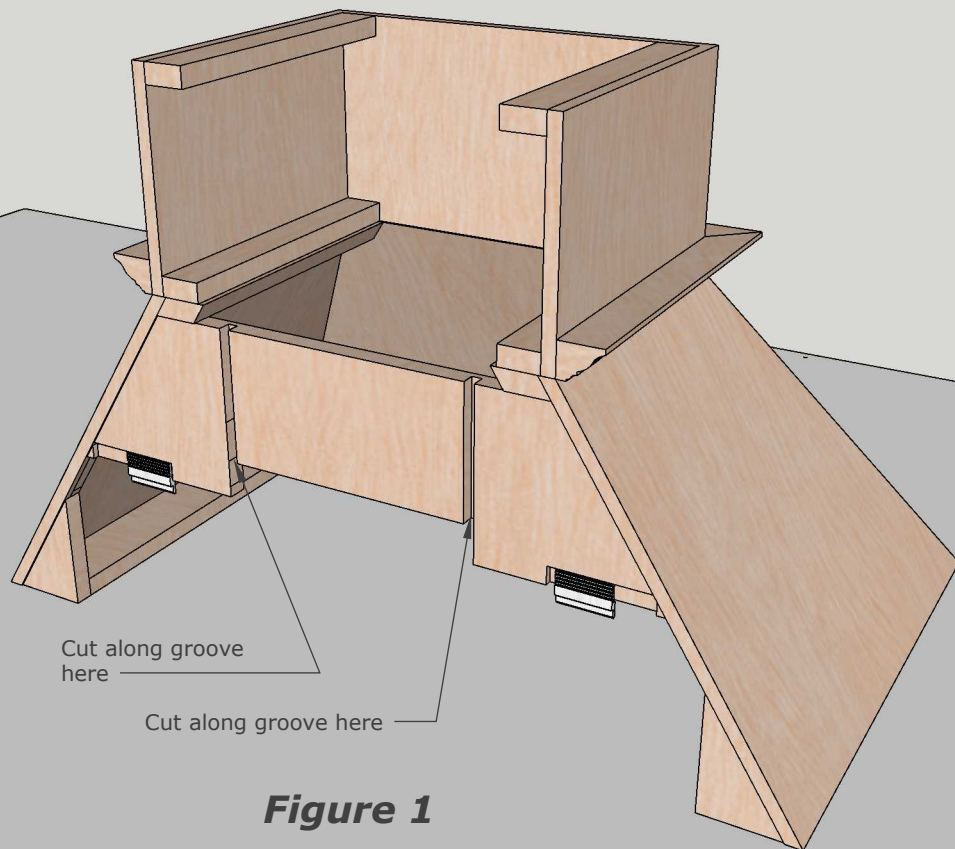


STEP #6

Removal of Cross Member from Crown Back

Using a saw or flush cut router - Cut along the vertical grooves on the crown back plate shown (Figure 1) Be extremely careful during this process so the integrity of the crown back to the sides is not compromised.

Figure 2 - Cross member removed from Crown Back

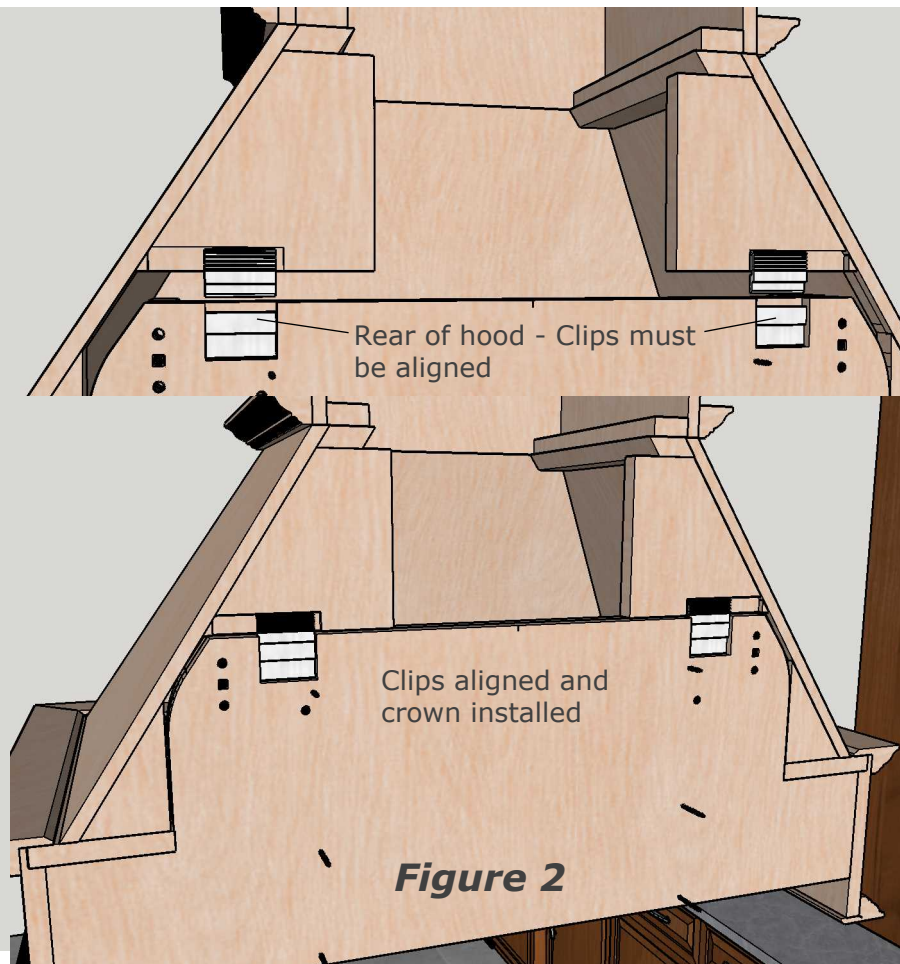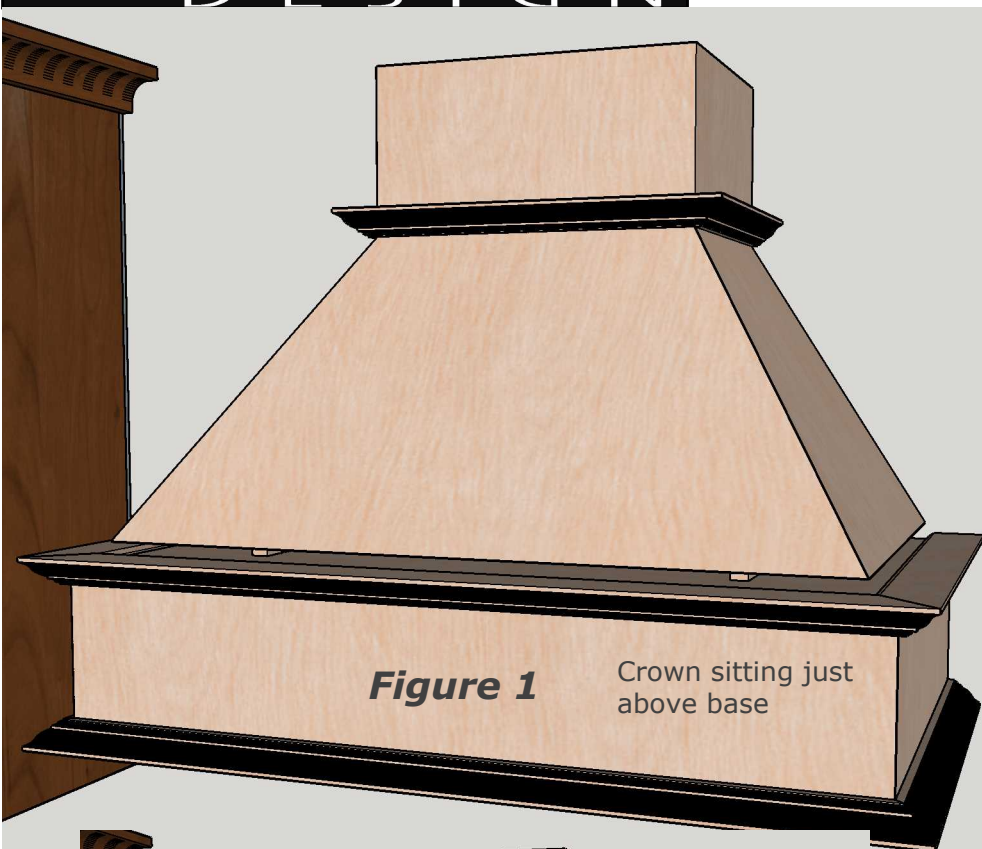

STEP #7 Installation of Crown

Lift the crown so it is approximately 3/4" above the base as shown in Figure 1.

With the Crown above the base make sure the back of the crown is against the wall and carefully lower the crown down onto the base.

Note: There are two aluminum clips that align the crown to the base and keep the crown from moving once installed. See Figure 2

**If you have any questions please feel free to
contact us at the following:**

Phone: (248) 572-6880

Fax: (248) 572-6884

Email: Sales@wood-hood.com

Website - www.wood-hood.com



Stanisci Design